


Contour Handle Grip Master Cylinder Installation and Adjustment

Shim Installation:

Due to variation in handlebar circumference, it may be necessary to use included shim material to fully tighten HGM (Handle Grip Master) to handlebar. Use as needed. Roll material over handlebar to open. Carefully slide HGM over handlebar and shim material. Secure HGM bolts.

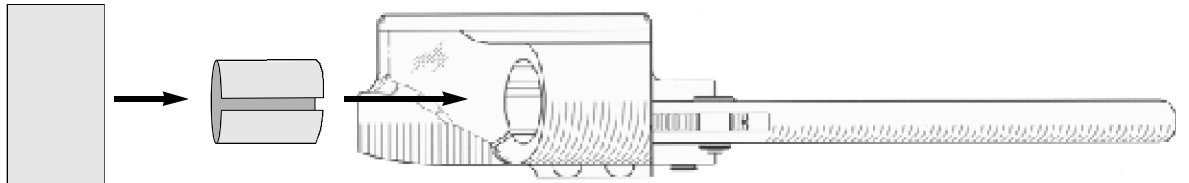

Lever Adjustment:

The PM Contour Handlegrip Master Cylinder (HGM) features an adjustable reach lever and can be customized to fit your hand.

- From bottom of lever, remove set screw (A) from adjuster barrel.
- Using small flat blade screwdriver, rotate push rod (B) to desired lever position.
- Apply a drop of Loctite #242 (blue) to set screw (A), reinstall and tighten. Set screw must tighten against flat side of push rod.

